

QUICK START GUIDE

Stacking Bracket Kits for KEN KREISEL DXD-808 and DXD-12012 Subwoofers

For additional help visit our support page on the web at: www.kreiselound.com/support.php

STEP 1: Contents

NOTE: each kit sold separately.
NOTE: screws are 1/4" -20 x 5/8"

Kit 1:
(P/N: SBK-5MM)

• 4 thick (5mm) rubber pads (50x50mm, with adhesive)



Kit 2:
(P/N: SBK-2S)

• 4 thin (3mm) rubber pads (50x50mm)



• 2 small brackets with 8 screws




Kit 3:
(P/N: SBK-1L)

• 1 large bracket with 4 screws (used only on DXD-12012)




STEP 2: Carefully rotate the subwoofers upside down & remove the 4 rubber feet from the bottom of each subwoofer to be used in stack (unscrew by hand, counter-clockwise).


NOTE: for stability & safety reasons, we do not suggest re-using the standard spiked feet in a Duo or Quattro system.

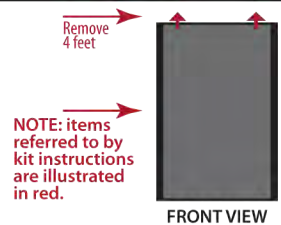

STEP 3: Attach the 4 thick (5mm) rubber pads from **Kit 1** to the bottom of the 1st subwoofer in the stack (base unit). Peel the liner to expose the adhesive & press the rubber pads into place as shown in the illustration to the right.

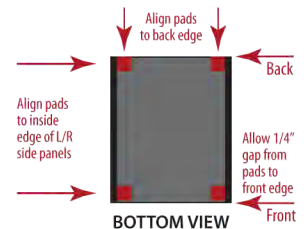


STEP 4: Return the 1st sub to a normal upright position. Place the 4 thin (3mm) rubber pads from **Kit 2** on the top of the subwoofer as shown in the illustration to the right.

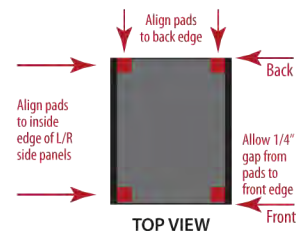



STEP 5: Carefully lift the 2nd subwoofer & place it on top of the bottom subwoofer, upside down. It is advised to have someone assist you when lifting or moving these subwoofers.

NOTE: every other subwoofer in a stack should be mounted upside down (inverted) to cancel vibration between the units. The logo badge direction can be changed on the inverted subwoofers by carefully pulling the logo straight off the cabinet and reinstalling it upside down.

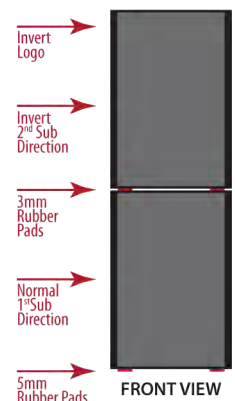

STEP 6: Attach brackets & screws from Kit 2 (& Kit 3 for DXD-12012). One side of each bracket is lined with rubber. Place this side towards the cabinet to avoid scratching the cabinet finish. Install all brackets & screws loosely at first. Align the cabinets into the proper position, then align the brackets evenly and gradually tighten all screws.

CAUTION: if the subwoofer stack is mounted in a location where the potential for tip over exists (i.e. from an Earthquake, or people bumping into the subwoofer stack) it is suggested you attach the top of the subwoofer stack to a wall stud with a suitable safety strap (not included) capable of preventing the subwoofer stack from tipping over.

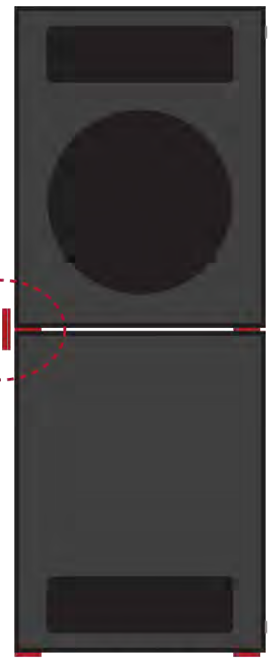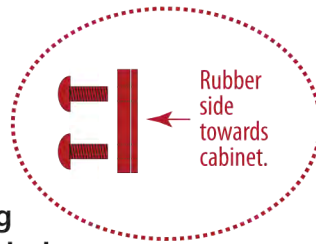


LEFT SIDE VIEW

Attach safety strap to available insert using 1/4" -20 x 5/8" screw


1 small bracket & 4 screws from Kit 2

1 large bracket & 4 screws from Kit 3 (DXD-12012 only)

1 small bracket & 4 screws from Kit 2

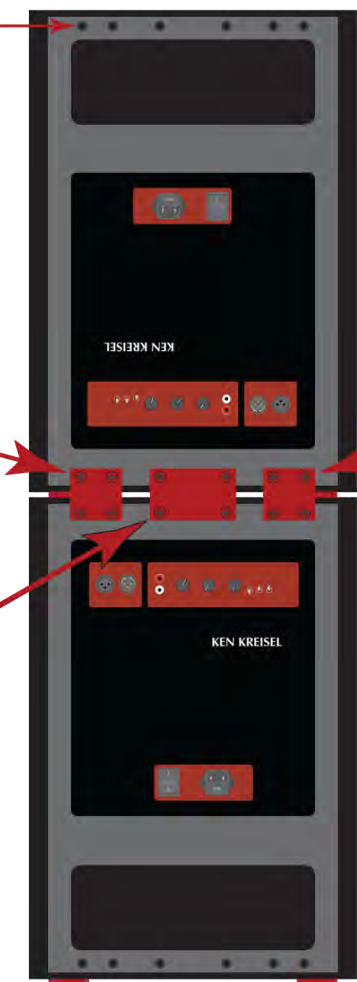

REAR VIEW (Duo)

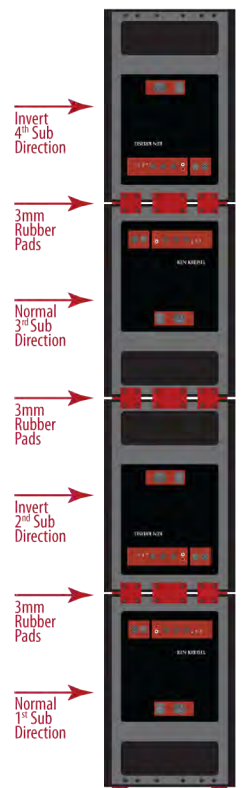

REAR VIEW (Quattro)

STEP 7: If you are assembling a Quattro subwoofer system consisting of 4 subwoofers, repeat steps 4, 5, and 6 as required, to properly install the additional 2 sets of hardware from Kit 2 (& Kit 3 for DXD-12012) to securely mount the subwoofers.

Thank you for your purchase!

For additional help visit our support page on the web at: www.kreisel.com/support.php